

# PHILIPS

## VoiceTracer

Audio recorder

Digital

Notes recording

4 GB

PC connection

DVT1150



## Easy notes recording

with one-touch recording

The Voice Tracer 1150 is the perfect voice recorder for capturing notes, ideas and thoughts on the go. Thanks to PC connection you can share your voice files very easily.

### Superior voice recording

- Voice-activation function for hands-free recording
- Time-stamped recording for easy file navigation

### Easy and intuitive experience

- PC connection for plug & play
- One-touch operation for instant recording


### Designed for professionals

- 4 GB built in for extra long recording hours
- Extra long battery runtime for longer recording sessions



# Highlights

## Voice-activation function

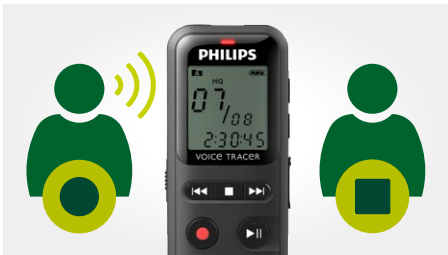

Voice-activated recording is a convenience feature for hands-free recording. When enabled, recording will start automatically when you start speaking. Recording stop automatically after you stop speaking and restart automatically when you start speaking again.

## Plug and play



Just plug your recorder into your PC and play in Windows and Mac OS.

## One-touch recording




Press and hold the record button for a moment to switch the recorder on and start recording instantly.

## 4 GB memory built-in




With the 4 GB of built-in memory, your recorder is able to capture multiple days of continuous recording.

## Time-stamped recording

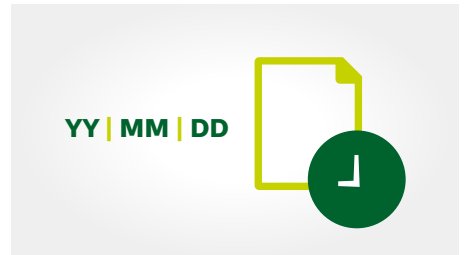

Thanks to time-stamped recording, the date and time of your recordings are added to the sound file, allowing you to easily find and navigate through your file library.

## Extra long battery runtime

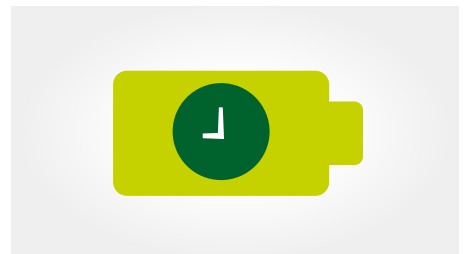

The batteries of the new recorder last for up to 44 hours for extra long recording sessions.

# Specifications

## Connectivity

Headphones: 3.5 mm  
USB: high-speed USB 2.0

## Display

Type: segment LCD  
Diagonal screen size: 33 mm

## Storage media

Built-in memory capacity: 4 GB  
Built-in memory type: NAND Flash  
USB mass storage

## Audio recording

Built-in microphone: 1 channel  
Microphon sensitivity: high/low  
Recording formats: WAV (ADPCM and PCM)  
Recording modes: HQ (PCM), SP (PCM), LP (ADPCM)  
Sample rate: 24 kHz (HQ), 8 kHz (SP/LP)  
Bit rate: 384 kbps (PCM), 128 kbps (PCM), 32 kbps (ADPCM)  
Recording time (internal memory): 24 h (HQ mode), 75 h (SP mode), 295 h (LP mode)

## Sound

Frequency response: 750 Hz – 18 KHz  
Speaker type: round  
Speaker diameter: 28 mm  
Speaker output power: 1 W

## Convenience

Instant one-touch recording  
Voice-activated recording  
Keypad lock  
Firmware upgradeable  
Variable playback speed  
Optimized for notes  
Real-time clock  
Remaining time display  
File lock  
Index (up to 10)  
A-B repeat

## Power

Battery lifetime: up to 44 hours  
Battery type: 2 × AAA battery  
Number of batteries: 2  
Batteries included: yes

## System requirements

Free USB port  
Operating system: Windows, Mac OS

## Product dimensions

Product dimensions (W × H × D): 108 × 37 × 20 mm  
Weight: 46 g

## Design and finishing

Color(s): black

## Package contents

Voice Tracer audio recorder  
2 × AAA batteries  
USB cable  
Quick start guide

## Operation conditions

Temperature: 5° – 45° C/41° – 113° F  
Humidity: 10 % – 90 %, noncondensing

